

ENGLISH - FRONT

Panel size: 40 x 60 mm | Six-panel layout

EN

VIDEO WALKIE-TALKIE

USER MANUAL

I. Appearance and Function Description

1-Voice changer/Back button

2-Antenna

3-Camera

4-Display screen

5-Volume Up/Up button

6-Volume Down/Down button

7-Power switch

8-MIC hole

9-Talkie button/OK button

10-Type-C interface

11-Charging indicator light

12-Lanyard hole

II. Power On/Off Function

1. The power switch is in the "OFF" position when the product leaves the factory.

2. Turn the power switch to "ON". The product will turn on automatically and a four-grid menu will appear, which includes video intercom, WeChat chat, photo taking, and gallery.

3. When using this product for the first time, please fully charge it.

Power OFF

Power ON

III. Charging indicator

1. Take the charging cable provided with this device and connect it to the charger. The power indicator light will turn red. When fully charged, the charging indicator light will automatically turn off.

2. Charger specifications: 5V/1A.

IV. Function Description

Basic Button Functions

1) Short press the up/down keys to move left/right and select the desired function on the main interface.

2) After selecting a function, press the OK key (call key) to enter.

3) To exit the function, press the Back key (mode key).

4) Long press the "+" key to increase the volume.

5) Long press the "-" key to decrease the volume.

6) Press and hold the " " key to conduct voice communication. The voice transmission of this device is a one-way channel. Only after

the speaker finishes speaking and releases the intercom key can the other party press and hold the intercom key to send voice messages.

6) This device has the following four screen display modes.

In video intercom mode, switch between them by long-pressing the volume +/- buttons.

Other side image

Own side image

Other side image

Own side image

Main menu interface: As shown in the image below

1- Video Intercom

2- Games

3- Take a photo

4- Photo album

1- Video Intercom

2- Micro Chat

3- Game

4- Taking Photos

5- Album

6- Flashlight

The following is a detailed description of the main functions of the main menu interface:

main menu interface:

1. Video intercom: 1) Press the intercom button (confirmation button) briefly to make a call: the recipient only needs to press the intercom button briefly to answer. 2) Press and hold the intercom button to initiate a call 3) Briefly press the volume +/- to increase or decrease the volume 4) Long-press the volume +/- to toggle video window display Long press the "+" volume key to switch the sound effect. 5) Press the Mode/Return key briefly to return to the main menu 2. Micro Chat: After entering the Micro Chat page, there are five functions available at the bottom, from left to right they are Emotions, Music, Taking Photos, and Images. As shown in the following picture:

Key operation:

1) Short press the volume +/- buttons to switch functions, short press the call button to confirm, then use the up and down keys to select the desired content to be sent, and press the confirm button to send.

2) Press the mode button to return to the main menu.

Emoji manipulation

Short press the volume +/- buttons to move and select the expression. Press the confirm key/call key to send.

Music operation

Short press the volume +/- buttons to move and select the music. Press the confirm key/call key to send.

Music operation

Short press to move left or right to select music. Press the confirmation key/call key to send.

Taking photo operation

Enter the photo-taking interface, press the confirm key/call key to take a photo and send it directly.

Image manipulation

Enter the picture interface. Press the volume up/down keys briefly to move and select the picture. Press the confirm key/call key to send.

3. Game: Shoot aircraft. Bullets are automatically fired. Short press the volume +/- keys to move up and down. Short press the mode key to return to the main menu.

4. Taking Photos: Enter the photo-taking interface, press the intercom key/confirm key briefly to take a photo, press the mode key/back key to return to the main menu.

5. Album:

1) To enter the album interface, press the volume +/- keys briefly to view the pictures.

2) Long press the intercom key/confirm key to activate the delete option. Briefly press the volume +/- keys to select the deletion type (all/single picture), and then press the intercom key/confirm key to perform the deletion.

3) Briefly press the mode key/back key to return to the main menu.

6. Flashlight: Turn on the screen when entering the interface

V. Product Power On/Off and Automatic Shutdown Function

This product enters working mode upon power-on and will remain operational regardless of use. It will automatically shut down when the battery is low. To stop use, please turn the power switch to the "OFF" position. To restart the product, simply turn the power switch to "OFF" and then to "ON" to start it normally.

•Shipment is subject to actual conditions

VI. Product Pairing and Connection Method:

This product uses a 2.4G Wi-Fi transmission and connection mode. Each package contains two walkie-talkies, which are already paired. These two walkie-talkies cannot be connected to other devices. If multiple sets are purchased, they can only be connected one-to-one per set; multiple products cannot be connected to each other simultaneously.

VII. Precautions:

a. This product is suitable for outdoor use.

b. This device is not waterproof.

c. The indoor distance for the product should be such that the image does not stutter.

VIII. Product Specifications

Screen	2.0 Inch IPS
CMOS pixel	30W
Battery capacity	3.7V 400-650mAh
Language	English
USB Port	Type-C
Operate TEMP	-20°C ~ 60°C
Storage TEMP	-30°C ~ 70°C
Power	5V/1.0A
Product size	124mm*54mm*23mm

CE FC RoHS

Made in China

EN / FR - two-sided instruction leaflet

FRANÇAIS - BACK

Panel size: 40 x 60 mm | Six-panel layout


FR

TALKIE-WALKIE VIDÉO

MODE D'EMPLOI



I. Présentation et fonctions

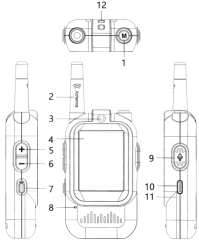

1 - Modification de la voix / Retour

2 - Antenne

3 - Caméra

4 - Écran

5 - Volume + / Haut

6 - Volume - / Bas

7 - Interrupteur marche/arrêt

8 - Orifice du microphone

9 - Bouton Parler / OK

10 - Port USB Type-C

11 - Voyant de charge

12 - Passage pour dragonne

II. Mise en marche et arrêt

1. À la sortie d'usine, l'interrupteur est sur OFF (arrêt).

2. Placez-le sur ON (marche). L'appareil s'allume automatiquement et le menu principal apparaît : communication vidéo, Micro Chat, prise de photos et galerie.

3. Chargez complètement l'appareil avant la première utilisation.

 OFF : arrêt

 ON : marche

III. Voyant de charge

1. Branchez le câble fourni à un chargeur. Le voyant devient rouge pendant la charge. Il s'éteint automatiquement lorsque la batterie est complètement chargée.

2. Caractéristiques du chargeur : 5 V / 1 A.

IV. Description des fonctions

Commandes de base

1) Appuyez brièvement sur Haut/Bas pour naviguer à gauche ou à droite et choisir une fonction dans le menu principal.

2) Appuyez sur OK (bouton Parler) pour ouvrir la fonction choisie.

3) Appuyez sur Retour (bouton Mode) pour quitter une fonction.

4) Maintenez + pour augmenter le volume, ou - pour le réduire.

5) Maintenez le bouton Parler pour communiquer. Une seule personne peut parler à la fois. Relâchez le bouton lorsque vous avez terminé ; l'autre personne peut alors le maintenir pour répondre.

6) Quatre modes d'affichage sont disponibles. En communication vidéo, maintenez les boutons de volume + / - pour changer de mode.

Autre

Vous

Autre

Vous

Menu principal

1 - Vidéo

2 - Jeux

3 - Photo

4 - Album

1 - Vidéo

2 - Micro Chat

3 - Jeu

4 - Photo

5 - Album

6 - Lampe

1. Communication vidéo

1) Appuyez brièvement sur Parler / OK pour appeler. Le destinataire appuie brièvement sur le même bouton pour répondre.

2) Maintenez le bouton Parler pour communiquer.

3) Appuyez brièvement sur + / - pour régler le volume.

4) Maintenez + / - pour changer la disposition des images. Maintenez le bouton de volume - pour changer l'effet sonore.

5) Appuyez brièvement sur Mode / Retour pour revenir au menu principal.

2. Micro Chat

La barre inférieure comprend cinq fonctions, de gauche à droite : émojis, voix, musique, prise de photos et images.



Micro Chat : commandes

Appuyez brièvement sur + / - pour choisir une fonction, puis sur Parler / OK pour confirmer. Utilisez Haut/Bas pour choisir le contenu, puis appuyez sur OK pour l'envoyer. Appuyez sur Mode pour revenir au menu principal.

Émojis : appuyez brièvement sur + / - pour choisir un émoji, puis sur Parler / OK pour l'envoyer.

Musique : appuyez brièvement sur + / - pour choisir une musique, puis sur Parler / OK pour l'envoyer.

Photo : ouvrez la fonction photo. Appuyez sur Parler / OK pour prendre une photo et l'envoyer directement.

Images : ouvrez la fonction images. Appuyez brièvement sur Haut/Bas pour choisir une image, puis sur Parler / OK pour l'envoyer.

3. Jeu

Jeu de tir sur des avions. Les tirs sont automatiques. Appuyez brièvement sur + / - pour vous déplacer vers le haut ou le bas. Appuyez brièvement sur Mode pour revenir au menu.

4. Prise de photos

Ouvrez la fonction photo et appuyez brièvement sur Parler / OK pour prendre une photo. Appuyez sur Mode / Retour pour revenir au menu principal.

5. Album

1) Ouvrez l'album. Appuyez brièvement sur + / - pour parcourir les photos.

2) Maintenez Parler / OK pour afficher l'option de suppression. Appuyez brièvement sur + / - pour choisir une seule photo ou toutes les photos, puis sur Parler / OK pour confirmer la suppression.

3) Appuyez brièvement sur Mode / Retour pour revenir au menu principal.

6. Lampe

L'écran s'allume lorsque vous ouvrez cette fonction.

V. Alimentation et arrêt automatique

Une fois allumé, l'appareil reste actif même lorsqu'il n'est pas utilisé. Il s'éteint automatiquement lorsque la batterie est faible. Pour réentendre, placez l'interrupteur sur OFF. Pour le redémarrer, placez-le sur OFF, puis sur ON.

• Les caractéristiques peuvent varier selon le produit livré.

VI. Appairage et connexion

L'appareil utilise une connexion Wi-Fi 2.4 GHz. Chaque boîte contient deux talkies-walkies déjà appairés. Ils ne peuvent pas se connecter à d'autres appareils. Avec plusieurs lots, chaque paire fonctionne indépendamment, en connexion un à un. Plusieurs appareils ne peuvent pas être reliés simultanément entre eux.

VII. Précautions

a. Convient à une utilisation en extérieur.

b. L'appareil n'est pas étanche.

c. À l'intérieur, restez à une distance permettant une image fluide, sans saccades.

VIII. Caractéristiques techniques

Écran	IPS 2,0 pouces
Pixels CMOS	30W
Batterie	3,7 V 400-650 mAh
Langue	Anglais
Port USB	Type-C
Temp. d'utilisation	-20 °C à 60 °C
Temp. de stockage	-30 °C à 70 °C
Alimentation	5 V / 1,0 A
Dimensions	124 × 54 × 23 mm



Fabriqué en Chine

EN / FR - two-sided instruction leaflet